


Changing Nitrogen Tank

1. Close gas valve. Use wrench to unscrew pig's tail from empty tank. Roll empty tank into hallway and full tank into its spot.
2. Screw pig's tail to gas valve on full tank. Use wrench to tighten just past when it gets difficult.
3. Open gas valve all the way.
4. Open pressure release valve. Depending on pressure gauge, you may want to open pressure release valve all the way to build up pressure in the tank, but if pressure is decent, you may just want to open it a little. Pressure is usually around 300 psi.
5. Check that liquid nitrogen valve is completely closed.

Alarm will occur when a tank is empty → tap screen to turn off

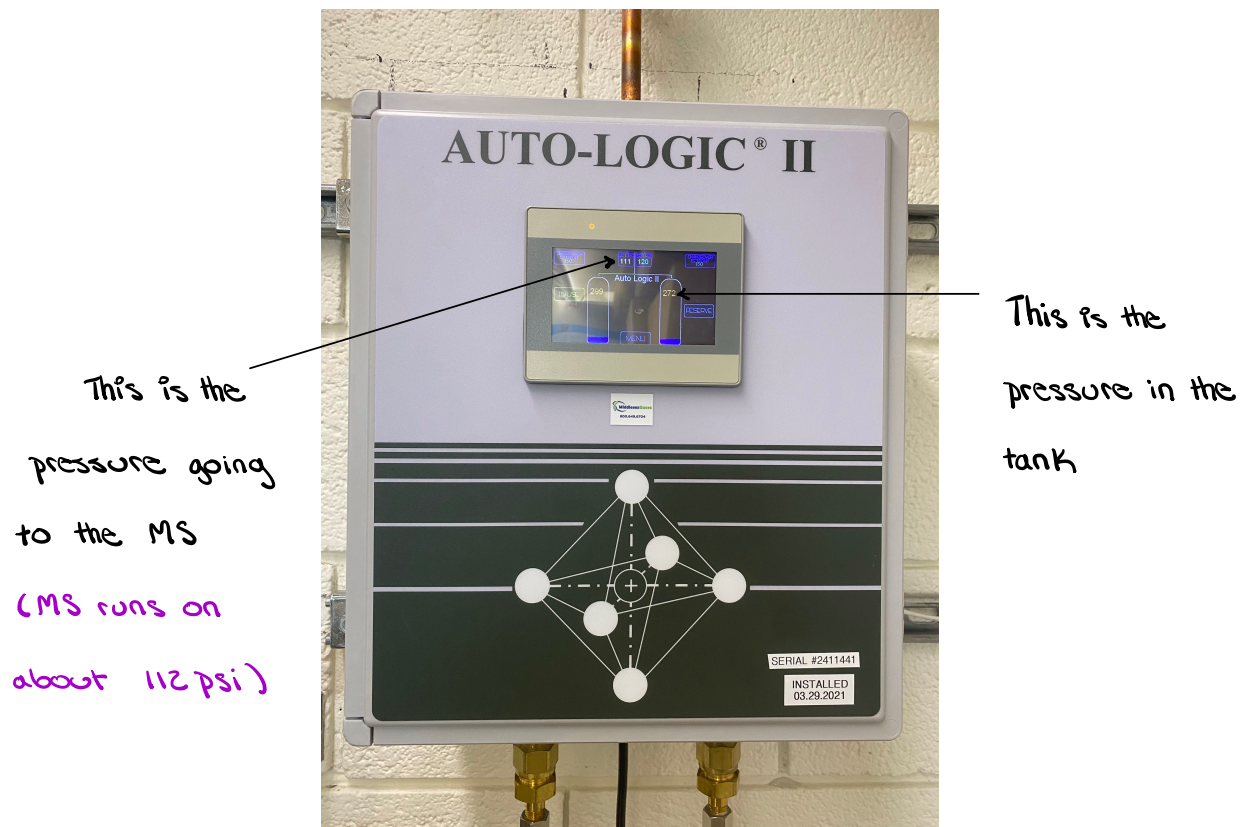

Pig's Tail

Gas



Pressure Release